

### KEYPAD OVERVIEW

#### Zone Display:

Key lit [1] to [0(10)] correspond to zones + 10 respectively.

Key Lit = Open or Entry delay

Key Flash = In alarm or Tamper



#### StayD Light (green)

On = StayD on

Off = StayD off

#### Off Light (red)

On = Disarmed

Off = System armed

#### AC Light (orange)

On = Power on

Off = Power off



= Press once + [MASTER CODE] for Quick Menu Programming.

#### Keys

[TBL] Trouble display

On = Trouble(s) occurring

[MEM] Alarm memory display

On = Alarm(s) occurred

[BYP] Bypass programming

On = Zone(s) bypassed

#### [ARM], [SLEEP], [STAY]:

On = System Armed

Off = Zone disarmed

Flash = Exit Delay

Fast = Exit Delay (final 10 sec.)

Flash\* or zone in alarm

#### \* Audible Indicators:

Continuous beep = Alarm

Variable beep = Fire alarm

Intermittent beep = Beginning of exit delay

Fast beep = Final 10 sec. of exit delay

### ARMING AND DISARMING

**TO ARM  
WHEN LEAVING...**



**TO ARM  
WHEN STAYING...**



#### To Regular Arm:

1. Close all opened zones.
2. Press [ARM].
3. Enter your [ACCESS CODE].

#### To Stay Arm:

1. Press the [STAY] key.
2. Enter your [ACCESS CODE].

#### To Sleep Arm:

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE].

**To Disarm: [OFF] + [ACCESS CODE]**

## PANIC ALARMS

To send an audible alarm to your Security Company, press and hold one of the button combinations listed for 3 seconds.

Panic Alarm Type	Button Combinations
Police Medical Fire	Press [1] & [3] Press [4] & [6] Press [7] & [9]

## TROUBLE DISPLAY

When a trouble condition occurs, the **[TBL]** key will illuminate.

1. Press the **[TBL]** key. The key will flash and number(s) corresponding to the trouble(s) will illuminate.
2. Read the corresponding explanation from the trouble list in the Esprit E55 User Guide.
3. Press the **[CLEAR]** key to exit.

## BYPASS PROGRAMMING

Bypassed zones remained unarmed when the system is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]**.
3. The corresponding key of all open zones will illuminate. Select the zone(s) you want to bypass by entering the one-digit zone number. The zone key will flash.
4. Press the **[ENTER]** key to save and exit.

## ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will illuminate.
4. Press the **[CLEAR]** key to exit.

## KEYPAD SETTINGS

To mute the keypad:

Press and hold the **[CLEAR]** key for 6 seconds to enable or disable Keypad Muting.

To modify the backlight:

1. Press and hold the **[MEM]** key for 3 seconds.
2. The **[MEM]** key will illuminate.
3. Press the **[MEM]** key to set the desired backlight level.
4. Press **[CLEAR]** twice to exit.

## CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the corresponding zone key for 3 seconds (Accept beep = Chime enabled, Fail beep = Chime disabled).

© Paradox Security Systems Ltd., 2013. Esprit E55 is a trademark or registered trademark of Paradox Security Systems Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.